HOME
DECORATORS COLLECTION

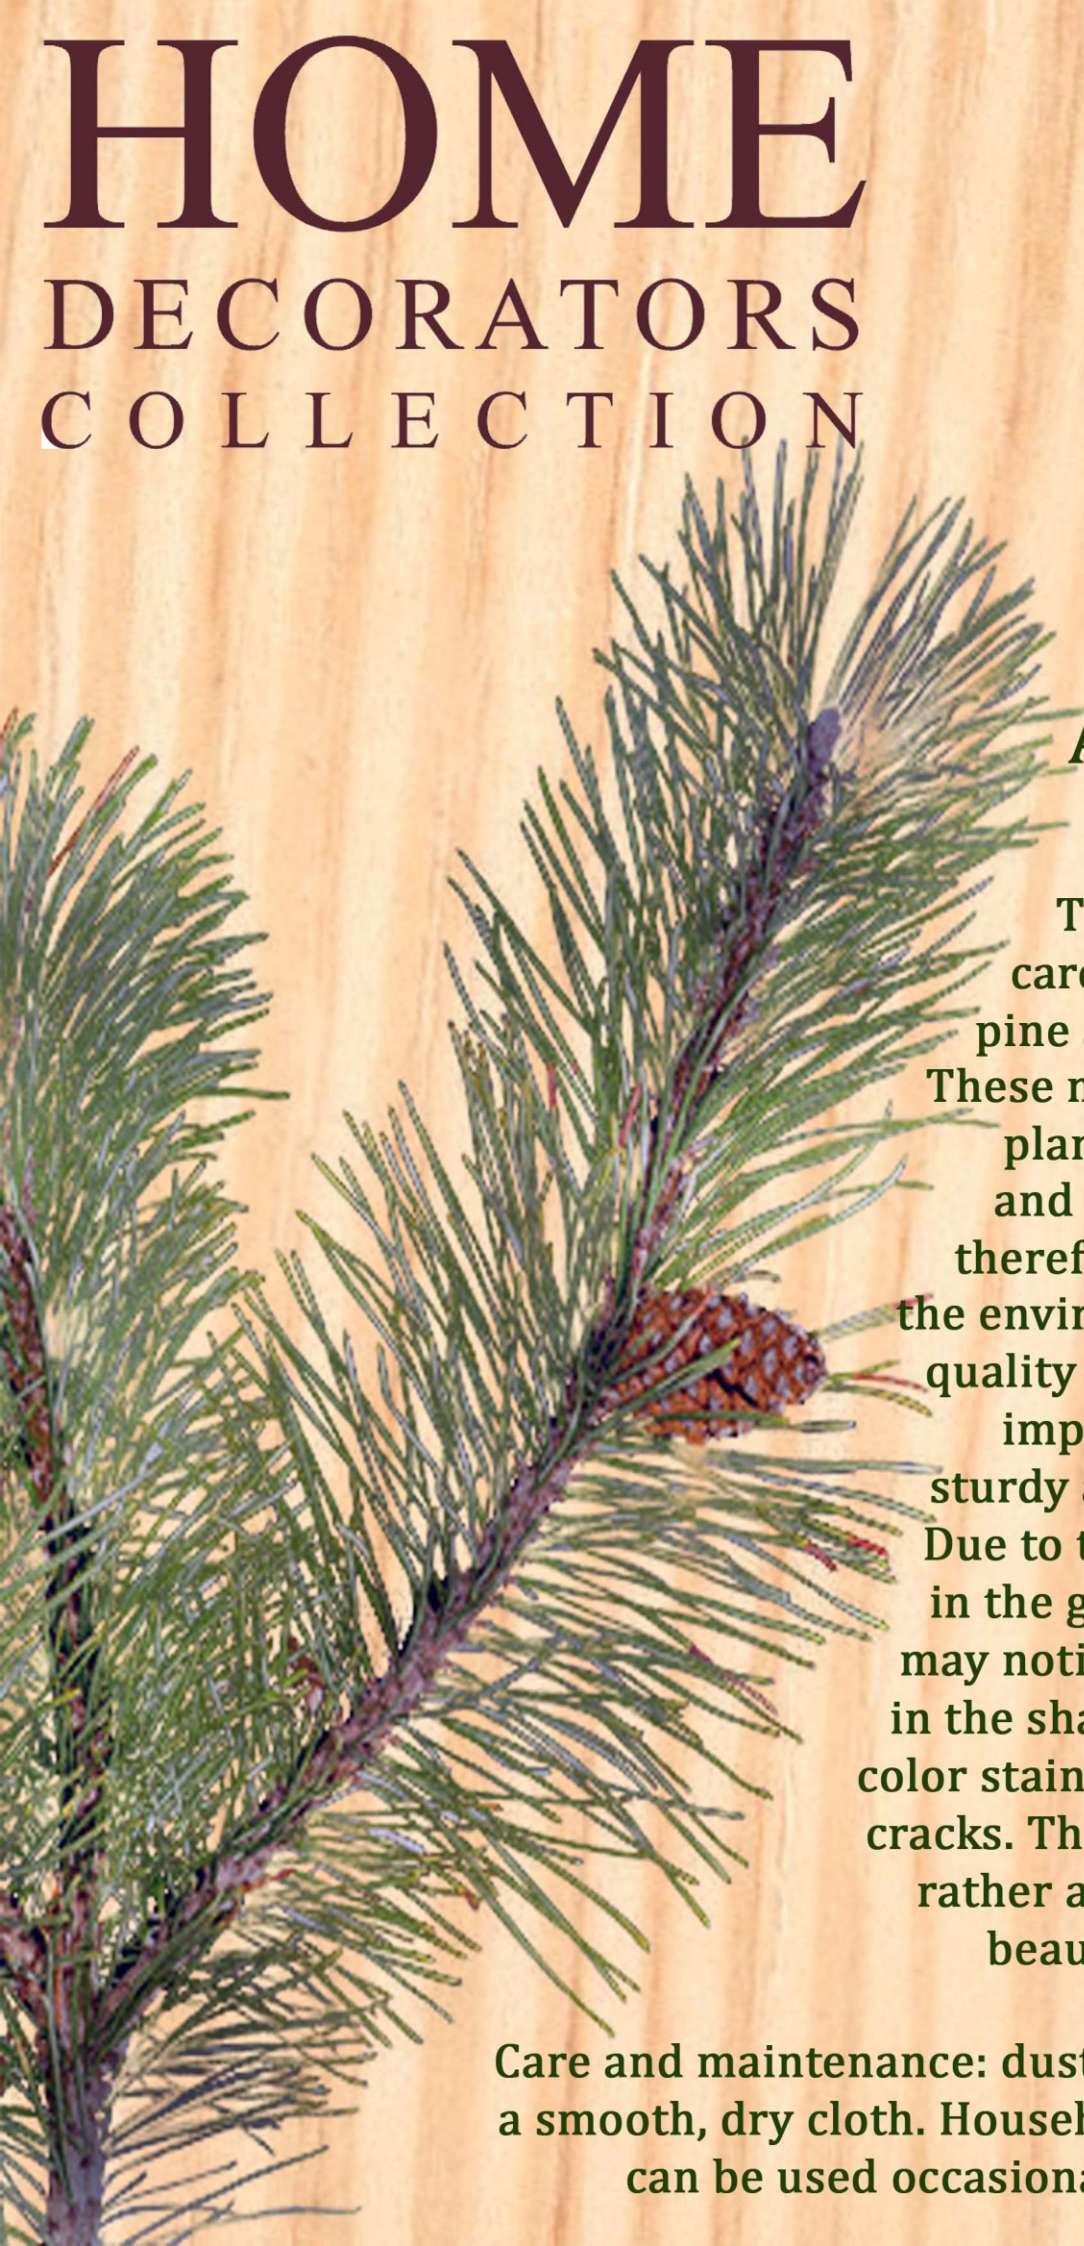

About the Wood and Finish

This product has been carefully crafted of solid pine and/or pine veneers. These materials derive from plantations, a renewable and well managed forest, therefore, not endangering the environment. The highest quality standards have been implemented to assure a sturdy and reliable product. Due to the natural variances in the graining of wood, you may notice subtle differences in the shading and tone of the color stain and also some small cracks. This is not a defect. But rather a result of the natural beauty of the wood itself.

Care and maintenance: dust when needed using a smooth, dry cloth. Household furniture polish can be used occasionally to restore luster.

HOME
DECORATORS
COLLECTION

Hawthorne King Bed 48"H

SKU # 6086800120 - Dark Cherry
SKU # 6086800410 - White
SKU # 6086800550 - Oak
SKU # 6086800210 – Black

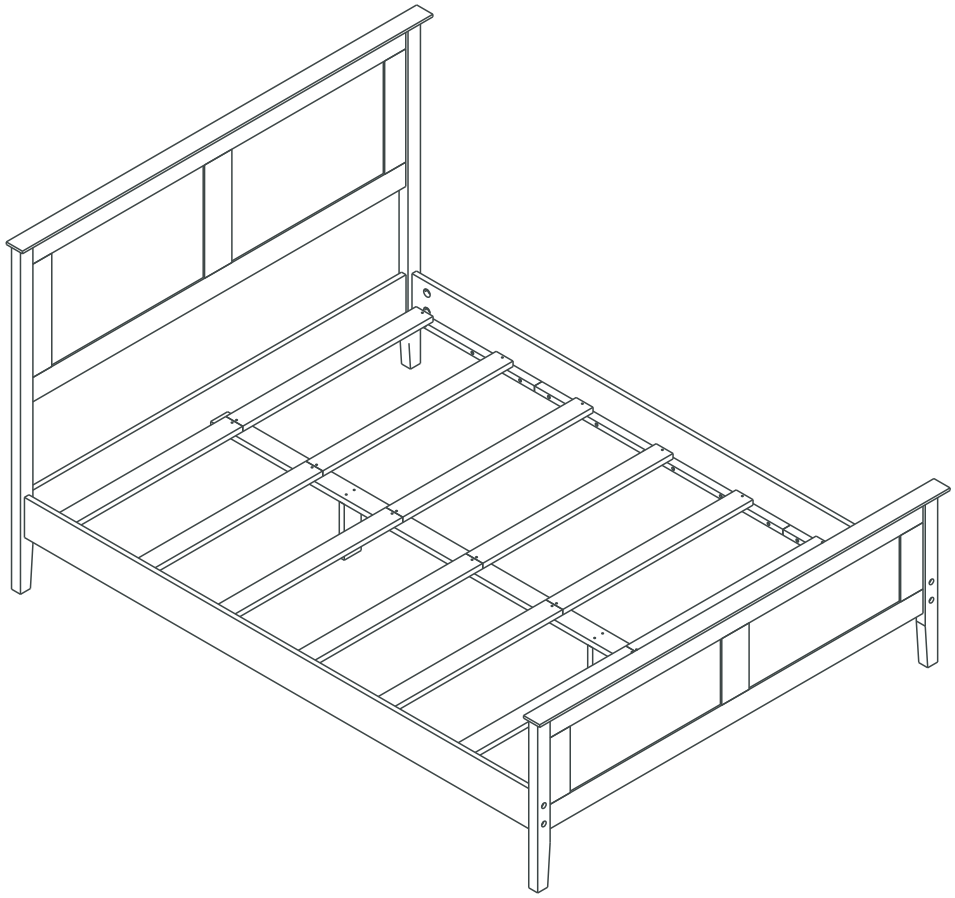

BEFORE BEGINNING ASSEMBLY, CHECK TO MAKE SURE ALL PARTS AND HARDWARE ARE ACCOUNTED FOR.
IT IS SUGGESTED THAT YOU SAVE THE CARTON AND PACKING MATERIAL UNTIL AFTER ASSEMBLY IS COMPLETED. SELECT A CLEAN, SMOOTH SURFACE TO WORK (SUCH AS CARPET).
THEN, FOLLOW THE EASY STEPS BELOW.

IF PARTS ARE MISSING, PLEASE CALL 1-800-998-7021 FOR INFORMATION.

MADE IN BRAZIL
16 02 06 2

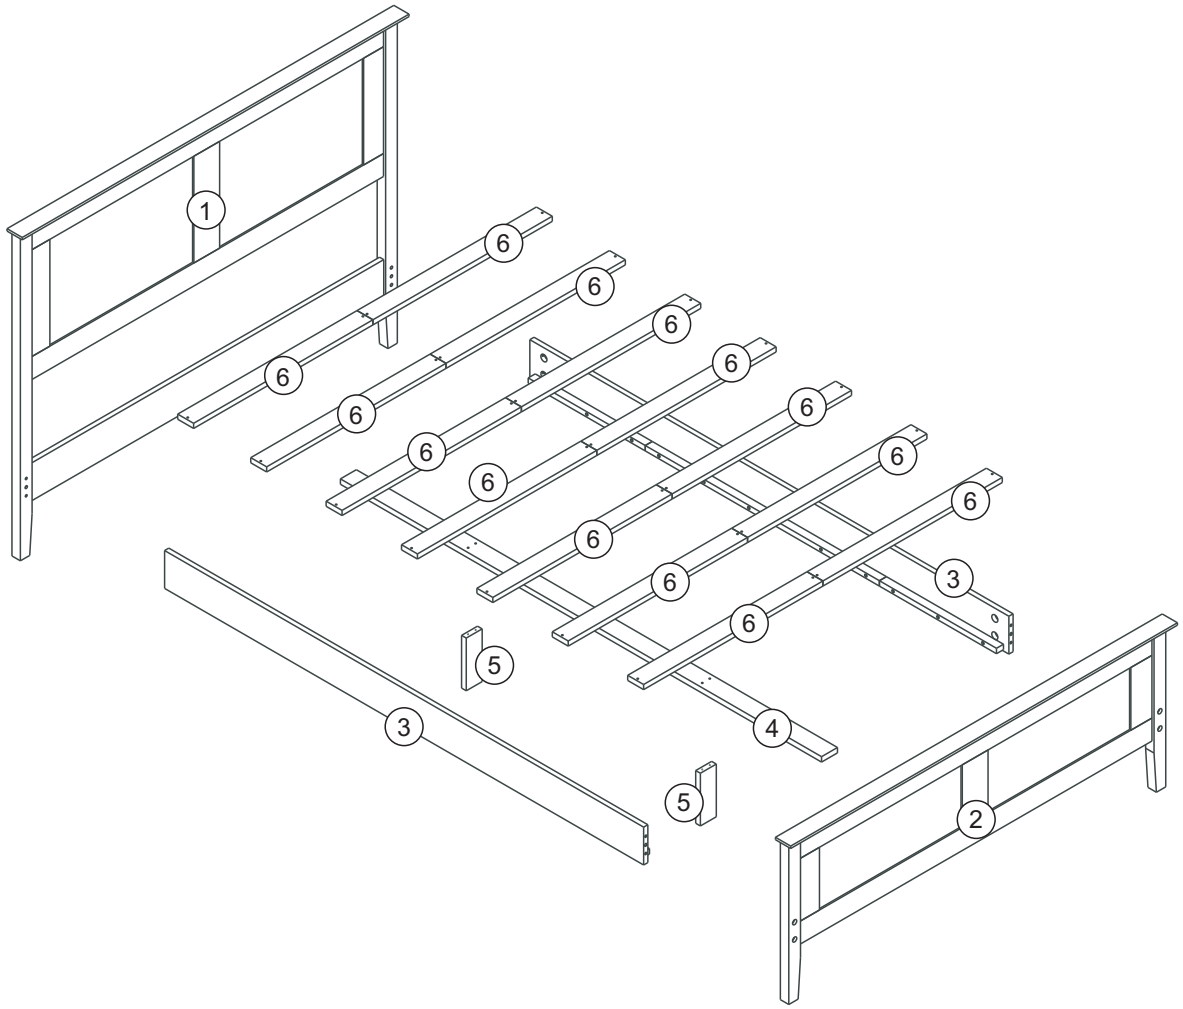

Part#	Qty	Description	Sizes(wxdxh)
1	1	HEADBOARD	83″ X 48″ X 2 5/8″
2	1	FOOTBOARD	83″ X 24″ X 2 5/8″
3	2	RAILS	80 4/8″ X 5 4/8″ X 1 7/8″
4	1	SLATS SUPPORT	81 3/4″ X 2 3/4″ X 3/4″
5	2	FEET	7 3/4″ X 2 3/4″ X 3/4″
6	14	SLATS	39 1/4″ X 2 3/4″ X 3/4″

HARDWARE

A	 1/4″X3 1/4″	8
B	 1/8″X1 1/4"	28
C	3/8″X1 1/4"	4
D		8
E		1

F		2
G	 1/8″X3/4″	4
H		4
I	3/8″X 1 1/4″	2
J	 1/8″X 1 5/8″	4

STEP 1

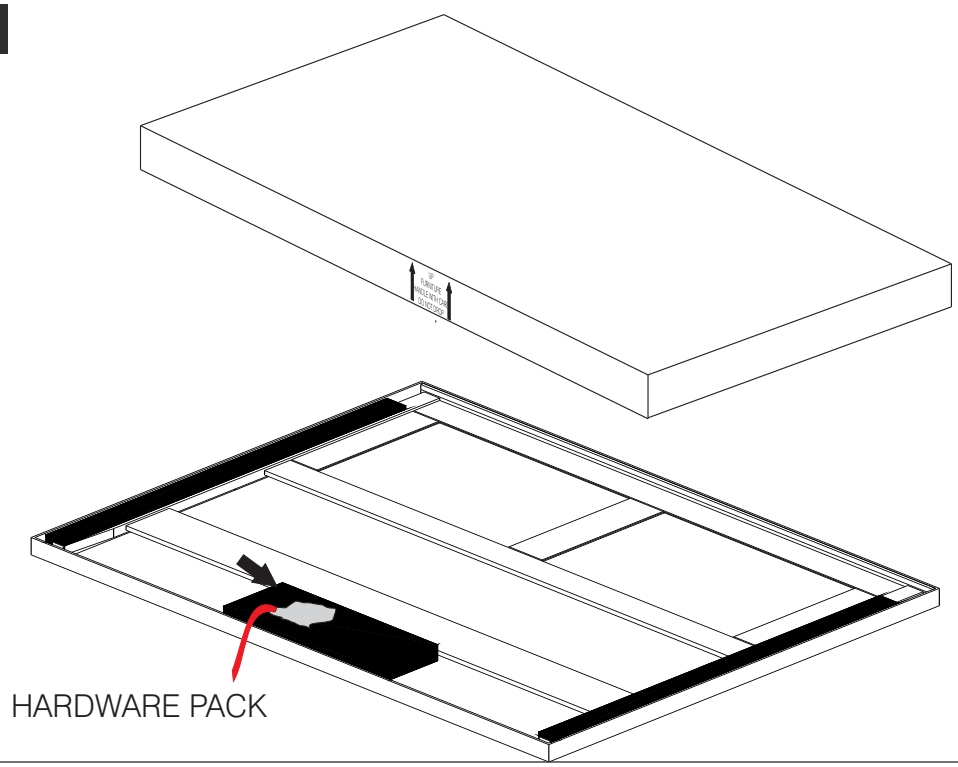

STEP 2

Insert wooden dowels (C) in the ends of the side rails (3).
Position the slat support (4) on its edge as shown. Insert dowels (I) into the ends as shown. Next attach the feet (5) into the slat support using screws (J).

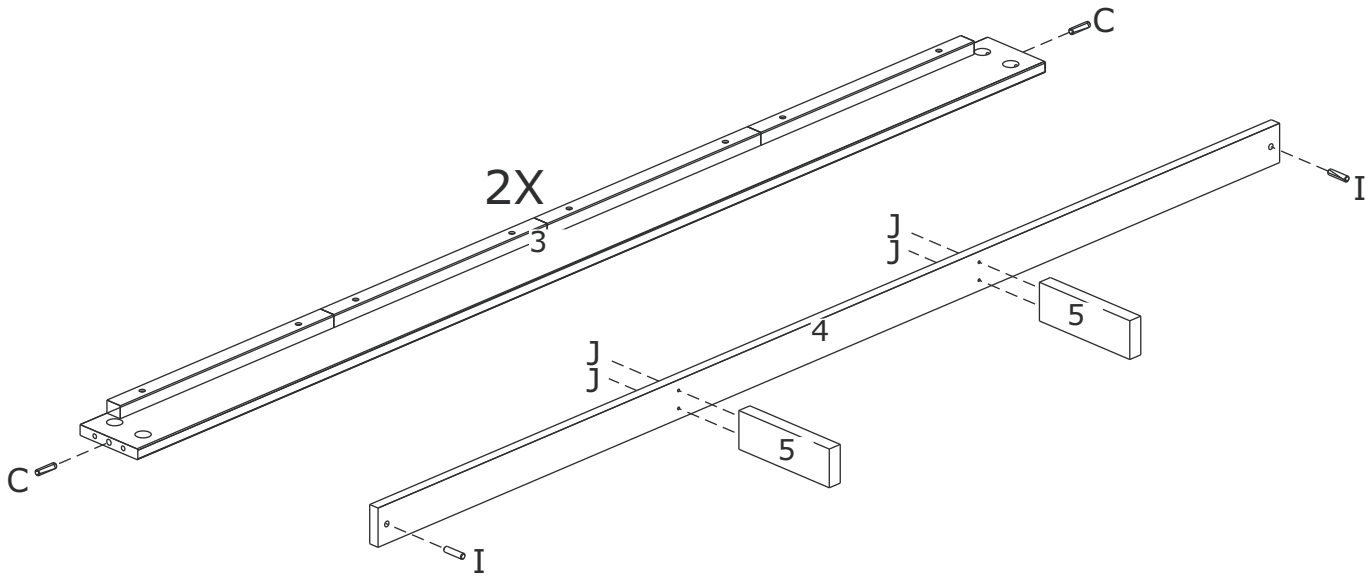

STEP 3

Attach the side rails(3) to the headboard(1) and footboard(2):
First, insert the half moon hardware(D) exactly as shown to each hole provided in the side rail. Once the hole of the hardware aligns with the hole on the headboard insert screw(A) from the back of the headboard and connect to the siderail. Once you have the headboard attached then attach the footboard in the same fashion.
Next attach the metal slat support brackets(F) to the headboard and footboard as shown using screws (G).

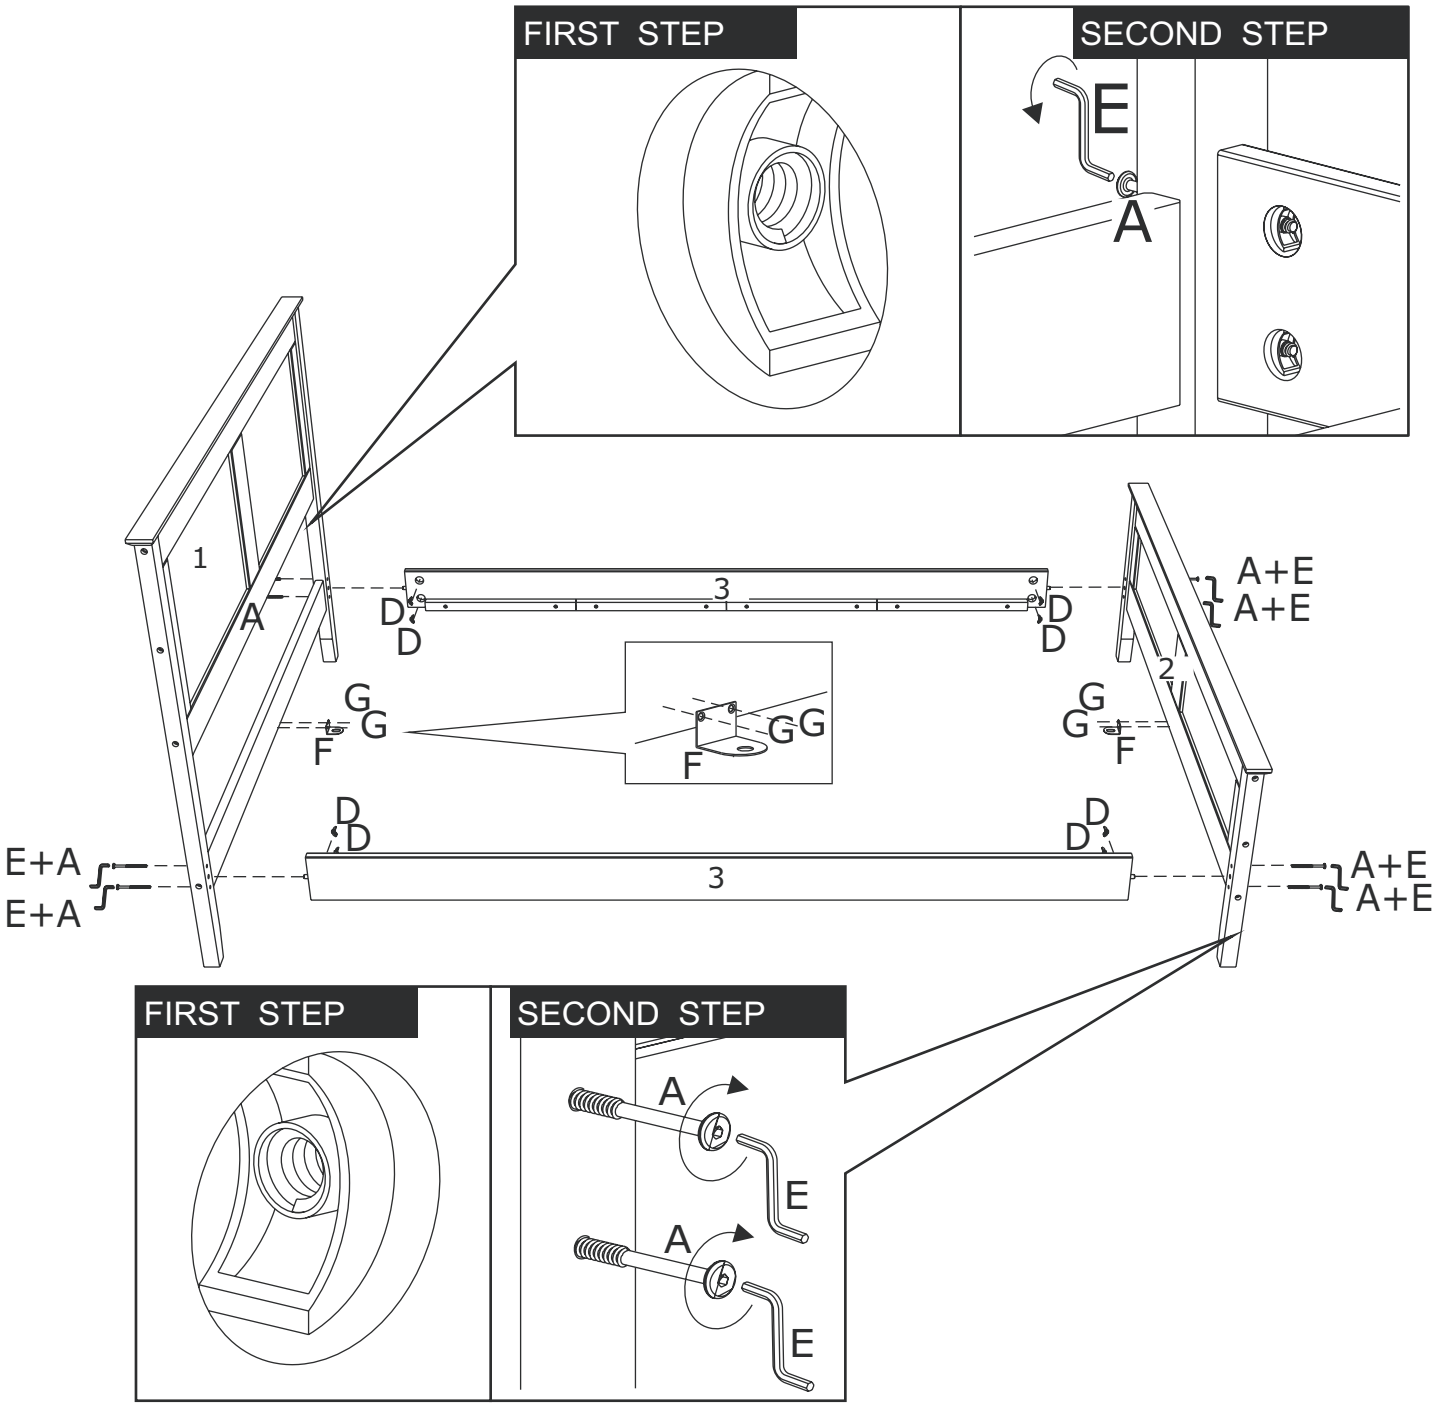

STEP 4

Insert the wood slat support(4) to the brackets as shown.
Also insert the wood plugs(H). You may need to gently tap these in with a RUBBER mallet.

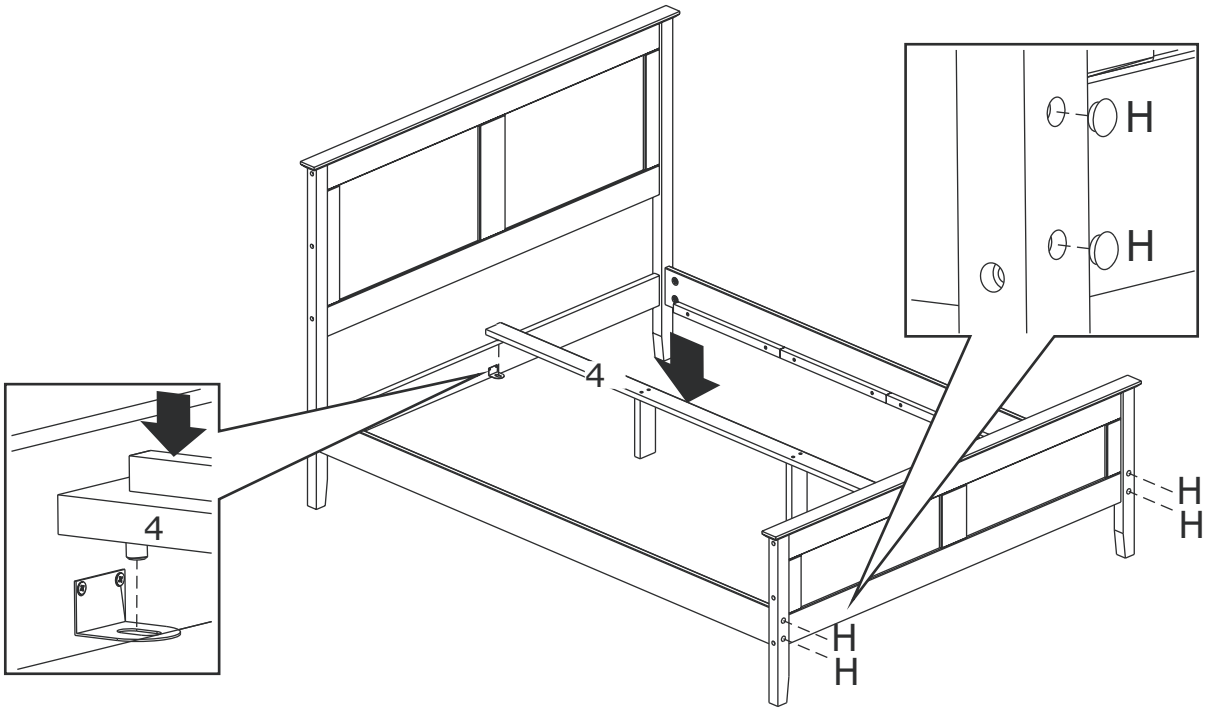

STEP 5

Evenly space out the cross slat supports(6) as shown and attach to the side rails using screws(B).